

# Index

Page numbers listed as chapter-page.

## A

### Accessories

Cabinet Plates .....	6-1
Ext. Remote Line Selector (Ext. RLS) ..	6-4
Furniture Mounted Panels .....	6-1
Headphone Distribution Amplifier .....	6-2
Logic Wiring Diagrams & Cables .....	6-2
Mic Remote & Peripheral Panels .....	6-2

### AMP MOD IV Receptacle Contacts

Crimp Tool .....	2-8
Crimp Procedure .....	2-7
Housings, Audio .....	2-9
Insertion & Removal .....	2-8

### Audio

Analog Connections .....	2-9
Digital Clock Reference .....	2-11
Digital Connections .....	2-10
S/PDIF Connections .....	2-10
Unbalanced Connections .....	2-10

## B

### Backup Batteries

Installing .....	2-4
Maintenance .....	5-5

### Bargraph Meters

Description .....	3-19
DIP Switch Settings .....	2-6

### BMXdigital Server

Configuration Requirements .....	4-1
Software Updates .....	4-10

## C

### Cabinet Plates .....

### Cabling and Wiring

Audio Connections .....	2-9
Cabling Access into Mainframe .....	2-1
Crimp Tool Operation .....	2-8
Logic Connections .....	2-11

### Required Cables and Wire .....

Unbalanced Connections .....	2-10
Wire Preparation .....	2-7

### Clock

DIP Switch settings .....	2-5
On Meter Panel .....	3-18
Servicing .....	5-5
Setting the Time .....	2-5

### Connection Examples

Basic Logic Example .....	2-60
Complex Logic Example .....	2-62
Mic Remote Control Example .....	2-58

### Connections

Audio .....	2-9
Logic .....	2-11
Unbalanced .....	2-10

### Connector Access .....

### Console Installation .....

### Control Room Module

Cue Control Logic .....	2-38
Description .....	1-2
DIP Switch Settings .....	2-35
Install Quick Guide .....	2-34
Logic .....	2-36
Operation Quick Guide .....	3-14

### Crimp Tool Operation .....

## D

### Denon CD Player Connection Example .....

Digital Clock Reference .....	2-11
DIP switches, how to set .....	2-13
DSP Card Description .....	1-3
DSP Card Operation .....	3-20

Page numbers listed as chapter-page.

**E**

ENCO DADPro Connection Example .....	2-63
Event Timer	
DIP switch Settings .....	2-6
On Meter Panel .....	3-18
Servicing .....	5-5
Troubleshooting .....	5-5
External Remote Line Selector (RLS) .....	6-4

**F**

Fader Servicing .....	5-4
Furniture and Cabinetry .....	6-1

**G**

General Information .....	1-1
General Troubleshooting .....	5-6
Grounding and Shielding .....	2-4
Guest Panels (Mic Remote Panels) .....	6-3

**H**

Harris Contact Information .....	5-1
Hazard/Warning Label Identification .....	v

**I**

Input Module (see Universal Input Module)	
Installation .....	2-1
Installation Kit Parts .....	5-3
Installing Backup Batteries .....	2-4
Internet Explorer Settings .....	4-4

**L**

Logic	
Block Diagram, Universal Logic .....	2-13
Cable, Mic Remote Panel .....	6-3
Connections .....	2-11
Dim & Mute Logic .....	2-15
Interface, Universal Logic .....	2-12
Mic & Peripheral Remote Logic .....	2-14
Setting DIP Switches .....	2-13
Warning Lamp Logic .....	2-15
Wiring Diagram Info .....	6-2

**M**

Mainframe	
Configuration .....	2-2
Connector Access .....	2-3
Description .....	1-1
Dimensions .....	2-1
Furniture Cutout .....	2-1
Maintenance .....	5-1
Manual Revisions .....	vi
Meter Panel	
Bargraph Meters .....	3-19
Clock .....	3-18
Description .....	2-3
Event Timer .....	3-18
Operation Quick Guide .....	3-18
Overview .....	3-1
Meters	
DIP Switch Setting .....	2-6
Setting Display Options .....	2-6
Troubleshooting .....	5-5
Mic Remote Panel .....	2-14, 6-3
Mic Remote Panel Connection Example ....	2-58
Microphone Preamplifier Module	
Description .....	1-1
DIP Switch Settings .....	2-17
Install Quick Guide .....	2-16
Operation Quick Guide .....	3-2
Modules	
Overview .....	3-1
Placement .....	2-2
Quick Guide Page Listing .....	2-12
Servicing .....	5-3
<b>N</b>	
Net Card	
Description .....	1-3
Functions & Connections .....	2-64
Operation .....	3-20
Net-only Module Information .....	2-64
NQX.INI File .....	4-3

Page numbers listed as chapter-page.

## O

Operation .....	3-1
Output 1 Module	
Description .....	1-3
DIP Switch Settings .....	2-51
Install Quick Guide .....	2-50
Operation Quick Guide .....	3-17
Producer IFB Logic .....	2-52
Output 2 Module	
Description .....	1-3
DIP Switch Settings .....	2-55
Install Quick Guide .....	2-54
Operation Quick Guide .....	3-17
Output 3 Module	
Description .....	1-3
DIP Switch Settings .....	2-57
Install Quick Guide .....	2-56
Operation Quick Guide .....	3-18

## P

Parts	
Installation Kits .....	5-3
Ordering .....	5-1
Replacement Parts .....	5-2
Spare Parts .....	5-2
Tool Kits .....	5-3
Peripheral Devices	
Basic Peripheral Device Example .....	2-60
Complex Peripheral Device Example .....	2-62
Peripheral Device Logic .....	2-14
Power Supply	
Connecting .....	2-4
Description .....	1-3
Grounding Notes .....	2-4
Maintenance .....	5-5
Producer Talkback/IFB Panel .....	2-53

## R

Remote Line Selector (RLS) Module	
Description .....	1-2
DIP Switch Settings .....	2-29

Remote Line Selector (cont.)	
Install Quick Guide .....	2-28
Logic I/O .....	2-30
Operation Quick Guide .....	3-11
Net-Only Module .....	2-64
Repairs	
Information .....	5-1
Services .....	5-1
RLS Module	
see Remote Line Selector (RLS) Module	
Router Integration .....	A-1
Router Module Controls .....	A-2
ROUTERS.INI File .....	A-9

## S

Safety Instructions .....	v
SAS Router, using with BMXdigital .....	A-1
Servicing	
Clock Assembly .....	5-5
Faders .....	5-4
Meters .....	5-5
Modules .....	5-3
Power Supply .....	5-6
Timer Assembly .....	5-5
Session Files	
Adding Channel Labels .....	4-8
Channel Button Settings .....	4-8
Channel Lockout Section .....	4-9
Channel Numbers .....	4-7
Downloading Session Files .....	4-6
Editing Session Files .....	4-5
Information Section .....	4-7
Labels Section .....	4-8
Loading and Saving Sessions .....	4-5
Making a Template Session File .....	4-5
Mapping Section .....	4-9
Recalling and Loading Sessions .....	4-5
Saving Session Files .....	4-5
Template Files .....	4-5
Uploading Session Files .....	4-7
Using Session Files .....	4-4

## Page numbers listed as chapter-page.

**S** (CONTINUED)

## Session Module

Description .....	1-2
DIP Switch Settings .....	2-33
External Timer .....	2-33
Install Quick Guide .....	2-32
Operation Quick Guide .....	3-12

Setting the Clock .....	2-5
-------------------------	-----

Setting Module DIP Switches .....	2-13
-----------------------------------	------

Software Updates .....	4-10
------------------------	------

Specifications .....	1-4
----------------------	-----

## Studio Module

Description .....	1-3
DIP Switch Settings .....	2-41

## Studio Module (continued)

External Talkback .....	2-46
Install Quick Guide .....	2-40
Operation Quick Guide .....	3-16
Producer Talkback .....	2-44
Studio 1 and 2 Logic .....	2-42

Studio Turret (console accessory) .....	6-1
---	-----

**T**

TFTP Server .....	4-10
-------------------	------

## Telco/Codec Module

Description .....	1-2
DIP Switch Settings .....	2-25
Foldback Mix .....	3-8
Install Quick Guide .....	2-24
Logic I/O .....	2-26
Operation Quick Guide .....	3-6
Net-Only Module .....	2-64
Telco Record Mix .....	3-9

Template Session .....	4-5
------------------------	-----

Timer (see Event Timer)	
-------------------------	--

Tool Kit .....	5-3
----------------	-----

**U**

Unbalanced Connections .....	2-10
------------------------------	------

## Universal Input Module

Description .....	1-1
-------------------	-----

## Universal Input Module (cont.)

DIP Switch Settings .....	2-19
Install Quick Guide .....	2-18
Logic Interface .....	2-12
Main Logic .....	2-20
Main Logic Schematic .....	2-20
Operation .....	3-3
Net-Only Module .....	2-64
T/B Option Logic .....	2-22

Updating Software .....	4-10
-------------------------	------

**V**

## VistaMax

Integrating BMXdigital with, .....	3-28
Mic Connections thru, .....	2-14
Net Card Connections .....	2-64
Setting Room Code .....	2-19

**W**

Warranty .....	1-6
----------------	-----

Wiring and Cabling .....	2-7
--------------------------	-----

Audio Connections .....	2-9
Crimp Tool Operation .....	2-8
Logic Connections .....	2-11
Required Cables and Wire .....	2-7
Unbalanced Connections .....	2-10
Wire Preparation .....	2-7